

GENERAL INFORMATION

Transmitter T19

- T19-02 -



[Empty rectangular box]

[Empty rectangular box]

[Empty rectangular box]

[Empty rectangular box]

About T19 transmitters

Tele Radio AB's remote control systems are suitable for a wide variety of applications for e.g. stationary or mobile equipments, hydraulic machines, construction, forestry or agriculture equipments and more. Tele Radio AB's transmitters and receivers are highly customizable and can be configured to suit the most wide-ranging application requirements & usage habits.

T19 transmitters have simplex communication and work in either discontinuous or continuous mode.

About this document

Every care has been taken in the preparation of this document. Please inform Tele Radio AB of any inaccuracies or omissions. This document covers ge Safety information the specific technical documentation (for customized systems), and having received the appropriate training. The purchaser of this product has been instructed how to handle the system safely. The following information is intended for use as a complement to applicable local regulations and standards.

» üD 6 3

«Ds W HW W u» W DuW D
D
S
«Ds W W » D»
! !
1

[Empty rectangular box]

[Empty rectangular box]

- Keep the product in a clean, dry place.
- Keep contacts and antennas clean.
- Wipe off dust using a clean, slightly damp cloth.
- Never use cleaning solutions.
- Check the encapsulation, foils and cable for damages. If the encapsulation or foil is damaged, moisture can cause serious damage to the electronics.

| | |
|-----------------------|------------------------------------------|
| IP code | IP65 |
| Operating temperature | -20...+55 °C / -4...+130 °F |
| Charging temperature | +10...+35 °C (+50...+95 °F) |
| Safety levels | EN ISO 13849-1, PLd CAT3 (Stop function) |
| Dimensions | 85 x 193 x 43 mm / 3.4 x 7.7 x 1.7 in |
| Weight | 300 g / 0.7 lbs |

BATTERY PRECAUTIONS

>

6

s

SE-436 32 Askim

Sweden

Phone: +46 (0)31 748 54 60, Fax: +46 (0)31 68 54 64

For more information about this product, please download the latest
End user instructions or Installation instructions from